

# Using Pixie Silk:

**Hint: Pixie Silk is very fragile, so treat it gently and take care not to break it.**

Take off the blue, sticky piece of Silk Seed not attached to Pixie Silk. It's in the bottom middle of the Pixie Silk tray.



**See the amazing demonstration and instruction videos at [fitterfairies.com](http://fitterfairies.com)!**


Punch out the hair clip holder from the back of the packaging. Use the Silk Seed to attach the hair clip holder to the wall.



Turn the Pixie Silk post upside down and carefully pull off one piece of blue Silk Seed from the bottom of a post.



The Pixie Silk will unwind and hang straight down with the Silk Seed dangling.

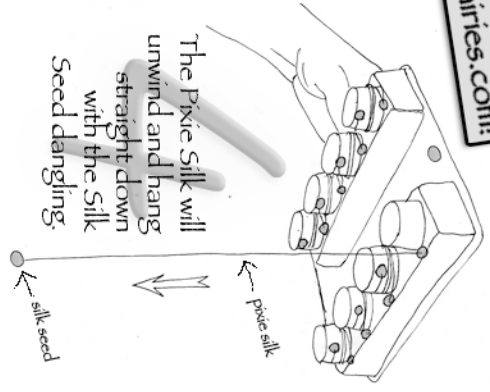

Attach the Silk Seed to the hair clip by placing it under the flower. Push it in securely against the inner wall as shown.



Before attaching the other end of the Pixie Silk to your fairy, attach the hair clip to the holder as shown. The Pixie Silk should hang straight down. This will also prevent the Pixie Silk from tangling when your fairy is not using it.



Replace the flower firmly in the hair clip, which holds the Silk Seed in place.



Either remove the flower from the back of the fairy's hair (for Eva, Daria or Alexa) or turn the flower to the side (Aerioth or Mara). Remove the other Silk Seed from the tray and push it into the lower hole in the fairy's hair. The Pixie Silk must go between the two flower posts. Replace the flower on top of the Silk Seed.




After your fairy is finished flying, take the Silk Seed out of her hair, and clip your hair clip onto the hair clip holder.

**Important: Always keep the Pixie Silk taut so that it does not tangle in the fairy's dress or wings. If it does get tangled, hold it against a white background so that you can see it better, then untangle it carefully.**


See the amazing demonstration and instruction videos at [fitterfairies.com](http://fitterfairies.com)!

# Fairy Flight:

Hint: To keep the Pixie Silk unseen, wear a dark patterned shirt and fly your fairy away from bright lights.

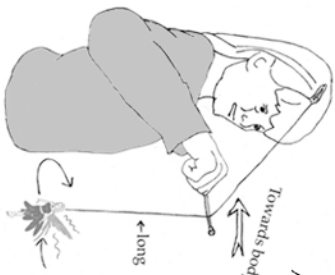

Attach the hair clip to your hair or the back of your shirt collar.

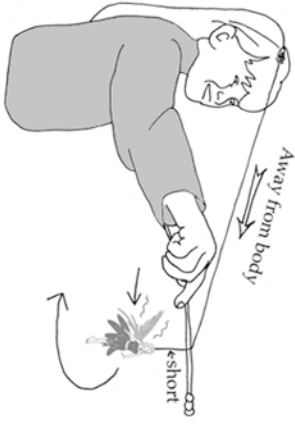


Hold the magic wand underneath the Pixie Silk.

Move the wand SLOWLY toward your body and then away from you. This makes the fairy look like she is flying on her own. Keep the distance between the fairy and the wand constantly changing. Make LONG, SLOW movements. Try to fly the fairy in circles. Create your own routines!

Let the fairy hang straight down. Sway slowly from side to side and watch her fly back and forth. Spin around slowly and let the fairy fly around you. Create new ways to make her fly!

For all sorts of flying tips, visit [fitterfairies.com](http://fitterfairies.com)!

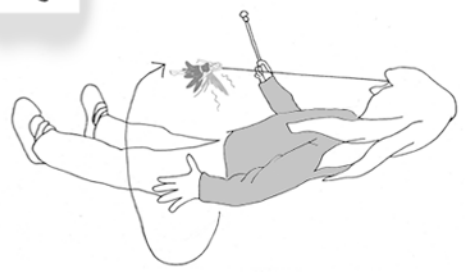

# Caring for Your



## Prepare Your Fairy for Flight:

Turn the switch on the back of her leg to the "on" position. Make sure the wings are folded back slightly. If not, pinch the base of the wings.



Your fairy should now magically flap her wings when you tilt her forward into flying position.



Now set her down on a table or other flat place. Her wings will suddenly stop flapping. Turn the switch off when you are not playing with your fairy.

See the amazing demonstration and instruction videos at [fitterfairies.com](http://fitterfairies.com)!

To change the batteries, use a small screwdriver to remove the hatch above the on/off switch.



Mara & Aeriath need one 3V lithium battery.

Eva, Darfa & Alexa need 2 size 13 hearing aid batteries.